



ADVANCED CELL DIAGNOSTICS

Formalin-Fixed Paraffin-Embedded (FFPE) Sample Preparation and Pretreatment User Manual

For the RNAscope[®] 2.5 Assay

PART 1

For Research Use Only (RUO). Not for diagnostic use.

Trademarks

RNAscope® and HybEZ™ are trademarks of Advanced Cell Diagnostics, Inc. VENTANA and DISCOVERY are trademarks of Roche. All other trademarks belong to their respective owners. All other trademarks belong to their respective owners.

Citing RNAscope® in Publications

When describing a procedure for publication using this product, please refer to it as the RNAscope® Assay and cite: Wang F, Flanagan J, Su N, Wang L-C, Bui S, Nielson A, Wu X, Vo H-T, Ma X-J and Luo Y. RNAscope®: A Novel *In Situ* RNA Analysis Platform for Formalin-Fixed Paraffin-Embedded Tissues. *J. Mol. Diagnostics*, 2012, 14:22–29.

Disclaimers

Advanced Cell Diagnostics, Inc. reserves the right to change its products and services at any time to incorporate technological developments. This manual is subject to change without notice.

Although this manual has been prepared with every precaution to ensure accuracy, Advanced Cell Diagnostics, Inc. assumes no liability for any errors, omissions, or for any damages resulting from the use of this information.

Copyright

© 2016. Advanced Cell Diagnostics, Inc. All rights reserved.

Contents

Chapter 1. Product Information	5
About this guide.....	5
Product description.....	5
Background.....	5
Sample types.....	5
Kit contents and storage.....	6
RNAscope® 2.5 Assay Reagents.....	6
RNAscope® 2.5 Reagent Kit.....	6
Required materials and equipment.....	7
HybEZ™ Hybridization System.....	7
User-supplied materials.....	7
Chapter 2. Before You Begin	9
Important procedural guidelines.....	9
Chapter 3. Prepare and Pretreat Samples	10
Prepare FFPE sections.....	10
Materials required.....	10
Fix the sample.....	10
Dehydrate, embed, and cut the sample.....	10
Prepare FFPE slides for the RNAscope® 2.5 Assay.....	11
Workflow.....	11
Materials required.....	12
Bake slides.....	12
Deparaffinize FFPE sections.....	12
Pretreat samples.....	13
Workflow.....	13
Materials required.....	14
Equilibrate equipment.....	14
Prepare 1X RNAscope® Target Retrieval Reagents.....	14
Apply RNAscope® Hydrogen Peroxide.....	14
Apply RNAscope® Target Retrieval Reagents.....	15
Create a barrier.....	15
Apply RNAscope® Protease Plus.....	15
Proceed to the RNAscope® 2.5 Assay.....	16
Troubleshooting.....	16
Appendix A. Tissue Pretreatment Recommendation	17
Tissue pretreatment recommendation.....	17
Tissue-specific pretreatment conditions.....	17

Appendix B. Target Retrieval Using the Oster® Steamer	19
Prepare the steamer.....	19
Appendix C. Safety.....	20
Chemical safety.....	20
Biological hazard safety	20
In the U.S.:.....	21
Documentation and Support.....	22
Obtaining SDSs	22
Obtaining support.....	22
Contact information	22
Limited product warranty	22

1

Chapter 1. Product Information



Before using this product, read and understand the information in **Appendix B. Safety** on page 20.

IMPORTANT!

We recommend reading the entire user manual before beginning any protocols.

About this guide

This user manual provides guidelines and protocols for the proper preparation and pretreatment of formalin-fixed, paraffin-embedded (FFPE) tissues mounted on slides. The slides can then be assayed using an RNAscope® 2.5 Reagent Kit.

RNAscope® 2.5 Reagent Kits come with a separate RNAscope® 2.5 Assay User Manual. Do not perform an RNAscope® 2.5 Assay without the correct user manual.

Visit www.acdbio.com/technical-support/user-manuals to download RNAscope® 2.5 Assay User Manuals.

Product description


Background

The RNAscope® 2.5 Assays use a novel and proprietary method of *in situ* hybridization (ISH) to visualize single RNA molecules per cell in samples mounted on slides. The assays are based on ACD's patented signal amplification and background suppression technology. Proprietary RNA-specific probes are hybridized to target RNA, and are then bound to a cascade of signal amplification molecules culminating in signal detection. Single-plex, 2-plex, multiplex, and automated assays are all available. The RNAscope® 2.5 Assay procedure is illustrated in **Figure 1** on page 6 and can be completed in 6–10 hours depending on the assay, or conveniently divided over two days. Most RNAscope® 2.5 Assay reagents are available in convenient Ready-To-Use (RTU) dropper bottles and provide a simple, nearly pipette-free workflow. Observe results using standard bright field or fluorescent microscopy.

Sample types

To perform the RNAscope® 2.5 Assays, you must start with properly prepared and pretreated samples. Multiple sample types are now compatible with RNAscope® 2.5 Assays and include: formalin-fixed, paraffin-embedded (FFPE) tissues; fresh, frozen tissues; fixed, frozen tissues; tissue microarray (TMA); and cell samples. Visit www.acdbio.com and contact support@acdbio.com for more information.

Figure 1. Procedure overview

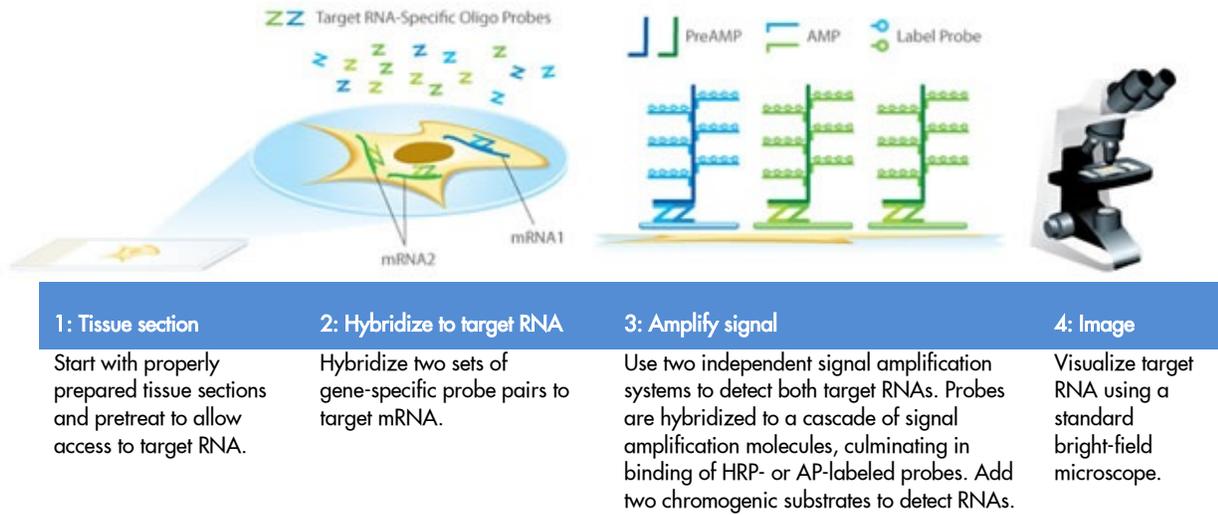

Kit contents and storage

RNAscope® 2.5 Assay Reagents

RNAscope® Assays require RNAscope® Probes and an RNAscope® 2.5 Reagent Kit. If you are performing an automated assay using the Ventana® DISCOVERY XT or ULTRA Systems, you must use RNAscope® VS Probes and the RNAscope® 2.5 VS Reagent Kit. Probes and Reagent Kits are available separately. RNAscope® HD Assays offer the choice of two Detection Reagents, Brown (DAB) and Red (Fast Red), which enable RNA molecules to be visualized as brown or red chromogenic dots, respectively. Visit www.acdbio.com/products/target-probes/search-product to find a gene-specific Target Probe. Visit www.acdbio.com to order appropriate Control Probes.

RNAscope® 2.5 Reagent Kit

Each RNAscope® 2.5 Reagent Kit provides enough reagents to stain ~20 tissue sections approximately 20 mm x 20 mm large. Larger tissue sections will result in fewer tests.

Each kit includes RNAscope® Target Retrieval Reagents (Cat No. 322000) and separately, RNAscope® Hydrogen Peroxide and RNAscope® Protease Plus (Cat. No. 322330). Pretreatment instructions are provided in this guide. For information on the other reagents and directions for use, refer to an RNAscope® 2.5 Assay User Manual. The reagents have a shelf life of nine months from the date of bulk manufacturing when stored as indicated in the following table:

<input checked="" type="checkbox"/>	Reagent	Cat. No.	Quantity	Storage
	RNAscope® Hydrogen Peroxide	322335	3 mL x 2 bottles	2–8°C
	RNAscope® Protease Plus	322331	4.5 mL x 1 bottle	2–8°C
	RNAscope® Target Retrieval Reagents	322000	70 mL x 4 bottles	15–30°C

IMPORTANT! RNAscope® 2.5 Reagent Kits share the same Wash Buffer, but have unique pretreatment reagents and Detection Kits. Do not interchange the reagent components of the Detection Kits, even those having the same name.

Required materials and equipment

The following materials and equipment are needed to perform the RNAscope® 2.5 Assay.

HybEZ™ Hybridization System

IMPORTANT! The RNAscope® 2.5 Assay has been verified using this system only.

The HybEZ™ Hybridization System (110 VAC, Cat. No. 310010; 220 VAC, Cat. No. 310013) is designed for the hybridization and incubation steps in the RNAscope® 2.5 Assays. Incubation steps in the RNAscope® 2.5 Assay require humid conditions to prevent sections from drying out.

For instructions on how to use the HybEZ™ Hybridization System, refer to the *HybEZ™ Hybridization System User Manual* available at <http://acdbio.com/technical-support/user-manuals> and view the training video at www.acdbio.com/technical-support/learn-more. The system contains the following components:

<input checked="" type="checkbox"/>	Component	Quantity	Cat. No.
	HybEZ™ Oven (110 or 220 VAC)	1 oven	310010 or 310013
	HybEZ™ Humidity Control Tray (with lid)	1 tray	310012
	HybEZ™ Slide Rack (20 slide capacity)	1 rack	310014
	HybEZ™ Humidifying Paper	2 sheets	—
	HybEZ™ Humidifying Paper Pack	15 sheets	310015

User-supplied materials

IMPORTANT! Do not substitute other materials for the ImmEdge™ Hydrophobic Barrier Pen and the SuperFrost® Plus Slides listed in the following table.

<input checked="" type="checkbox"/>	Description	Supplier	Cat. No.
	ImmEdge™ Hydrophobic Barrier Pen (required)	Vector Laboratory	H-4000
	SuperFrost® Plus Slides (required)	Fisher Scientific	12-550-15
	Xylene	Fisher Scientific/MLS*	X3P-1GAL
	100% Alcohol (EtOH)	American Master Tech Scientific/MLS	ALREACS
	10% neutral-buffered formalin (NBF)	MLS	—
	Paraffin wax	MLS	—
	Microtome	MLS	—
	Drying oven, capable of holding temperature at 60 +/- 1°C	MLS	—
	Tissue-Tek® Vertical 24 Slide Rack	American Master Tech Scientific/MLS	LWSRA24



<input checked="" type="checkbox"/>	Description	Supplier	Cat. No.
	Tissue-Tek® Staining Dish (2 required)	American Master Tech Scientific/MLS	LWT4457EA
	Tissue-Tek® Clearing Agent Dish, xylene resistant (2 required)	American Master Tech Scientific/MLS	LWT4456EA
	Water bath or incubator, capable of holding temperature at 40 +/- 1°C	MLS	—
	Distilled water	MLS	—
	Tubes (various sizes)	MLS	—
	Fume hood	MLS	—
	Paper towel or absorbent paper	MLS	—
	Glass beaker (1 or 2 L)	MLS	—
	Hot plate	Fisher Scientific/MLS	11-300-49SHP
	Aluminum foil	MLS	—
	Forceps, large	MLS	—
	Thermometer	MLS	—

* Major Laboratory Supplier in North America. For other regions, please check Catalog Numbers with your local lab supplier.

2

Chapter 2. Before You Begin

Prior to running the RNAscope® Assay on your samples for the first time, we recommend that you:

- View the video demonstrations available at www.acdbio.com/technical-support/learn-more.
- Run the assay on FFPE RNAscope® Control Slides (Cat. No. 310045 for Human control slide, Hela; Catalog No. 310023 for Mouse control slide, 3T3) using the Positive and Negative Control Probes.

Important procedural guidelines

- Start with properly fixed and prepared sections.
- Use only samples mounted on SuperFrost Plus® Slides (Fisher Scientific; Cat. No. 12-550-15).
- Follow the recommended pretreatment conditions for your sample. Refer to **Appendix A. Tissue Pretreatment Recommendation** on page 17.
- Always run positive and negative control probes on your sample to assess sample RNA quality and optimal assay workflow.
- Do *not* substitute required materials. Assay has been validated with these materials only.
- Follow the protocol exactly for best results.
- Do not let your sections dry out during the procedure (except after Target Retrieval ethanol wash).
- Use good laboratory practices and follow all necessary safety procedures. Refer to **Appendix B. Safety** on page 20 for more information.

3

Chapter 3. Prepare and Pretreat Samples

The following protocols describe formalin-fixed, paraffin-embedded (FFPE) sample preparation and pretreatment. For other sample types and preparation methods, contact support@acdbio.com for the latest protocols and guidelines.

IMPORTANT! We highly recommend following these guidelines. We cannot guarantee assay results with other preparation methods.

For suboptimally treated samples, you may need to optimize pretreatment conditions. Refer **Appendix A. Tissue Pretreatment Recommendation** on page 17 in addition to www.acdbio.com/technical-support/solutions.

Prepare FFPE sections

Materials required

- 10% neutral buffered formalin (NBF)
- 1X PBS
- Paraffin wax
- 100% Alcohol
- Xylene
- Microtome
- Water bath
- SuperFrost® Plus slides

Fix the sample

1. Immediately following dissection, fix tissue in 10% NBF for **16–32 HRS** at **ROOM TEMPERATURE (RT)**. Fixation time will vary depending on tissue type and size.



CAUTION! Handle biological specimens appropriately.

IMPORTANT! Fixation for **<16 HRS** or **>32 HRS** will impair the performance of the RNAscope® 2.5 Assay.

Dehydrate, embed, and cut the sample


IMPORTANT! Use fresh reagents.

1. Wash sample with 1X PBS.
2. Dehydrate sample using a standard ethanol series, followed by xylene.
3. Embed sample in paraffin using standard procedures.

Note: Embedded samples may be stored at room temperature with desiccation. To better preserve RNA quality over a long period (>1 yr), storing at 2–8°C with desiccation is recommended.

4. Trim paraffin blocks as needed, and cut embedded tissue into 5 +/- 1 µm sections using a microtome.

- Place paraffin ribbon in a **40–45°C** water bath, and mount sections on **SUPERFROST® PLUS SLIDES**. Place tissue as shown for optimal staining:

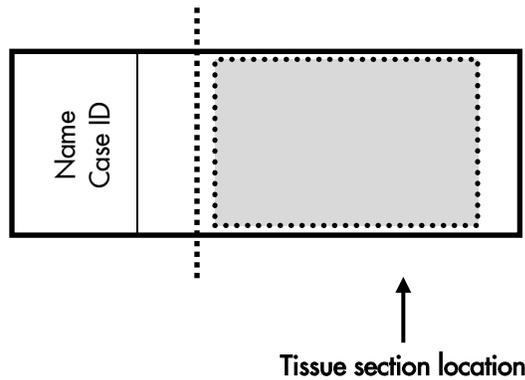

IMPORTANT! Do not mount more than one section per slide. Place sections in the center of the slide.


- Air dry slides **OVERNIGHT** at **RT**.
-

OPTIONAL STOPPING POINT. Use sectioned tissue within 3 months. Store sections with dessicants at room temperature.

Prepare FFPE slides for the RNAscope® 2.5 Assay

IMPORTANT! Do not use the HybEZ™ Oven.

Workflow

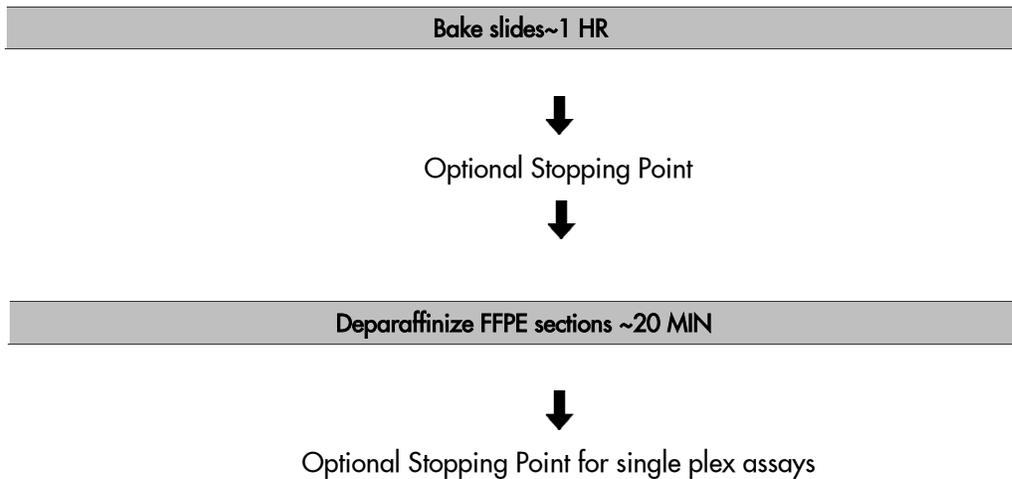

IMPORTANT! We do not recommend stopping the protocol for duplex assays until after hybridizing your sample with probe. Refer to PART 2, RNAscope 2.5 Duplex Detection UM-322500.

Materials required

- Drying oven
 - Prepared FFPE slides
 - Tissue-Tek® Vertical 24 Slide Rack
 - Distilled water
 - Fume hood
 - Xylene
 - 100% Alcohol (EtOH)
 - Tissue-Tek® Clearing Agent Dish (2)
 - Tissue-Tek® Staining Dish (2)
-

Bake slides

1. Bake slides in a dry oven for **1 HR** at **60°C**.

OPTIONAL STOPPING POINT. Use immediately or store at **RT** with desiccants for ≤ 1 week. Prolonged storage may degrade sample RNA.

2. If you continue, prepare the materials for the following protocols while the slides are baking: **Deparaffinize FFPE sections** in the next section, **Pretreat samples** on page 12, and RNAscope® 2.5 assay materials.

Note: If you choose the optional stopping point following **Create a barrier** on page 15, prepare the reagents for **Pretreat samples** and RNAscope® 2.5 assay materials the next day.

Deparaffinize FFPE sections

Reagents may be prepared ahead of time. Ensure all containers remain covered.

1. In a fume hood:
 - Fill two Tissue-Tek® Clearing Agent dishes with ~200 mL fresh Xylene.
 - Fill two Tissue-Tek® Staining dishes with ~200 mL fresh 100% Alcohol. Place slides in a Tissue-Tek® Slide Rack and submerge in the first Xylene-containing dish in the fume hood.
2. Incubate the slides in Xylene for **5 MIN** at **RT**. Agitate the slides by occasionally lifting the slide rack up and down in the dish.
3. Remove the slide rack from the first Xylene-containing dish and *immediately* place in the second Xylene-containing dish in the fume hood.
4. Repeat Step 3.
5. Remove the slide rack from the second xylene-containing dish and *immediately* place in the dish containing 100% Alcohol.
6. Incubate the slides in 100% Alcohol for **1 MIN** at **RT** with agitation.
7. Repeat Steps 6 and 7 with 100% Alcohol.
8. Remove the slides from the rack, and place on absorbent paper with the section face-up. Air dry slides for **5 MIN** at **RT** (or until completely dry).

Pretreat samples

IMPORTANT! Before you begin, make sure you know the pretreatment conditions specific to your sample type from **Appendix A. Tissue Pretreatment Recommendation** on page 17.

Workflow

Prepare 1X RNAscope® Target Retrieval Reagents ~10–20 MIN



Apply RNAscope® Hydrogen Peroxide~10 MIN



Apply RNAscope® Target Retrieval Reagents~10–30 MIN



Create a barrier ~15 MIN



Optional Stopping Point for single plex assays

IMPORTANT! We do not recommend stopping the protocol for duplex assays until after hybridizing your sample with probe. Refer to PART 2, RNAscope 2.5 Duplex Detection UM-322500.



Apply RNAscope® Protease Plus ~30–60 MIN



PROCEED IMMEDIATELY TO RNASCOPE® 2.5 ASSAY

Materials required

Materials provided by the RNAscope® 2.5 Reagent Kit	Other Materials and Equipment
<ul style="list-style-type: none"> • RNAscope® Hydrogen Peroxide • RNAscope® Target Retrieval Reagents • RNAscope® Protease Plus 	<ul style="list-style-type: none"> • Prepared slides • Distilled water • Glass beaker (1 or 2 L) • HybEZ™ Humidifying System • Paper towel or absorbent paper • Hot plate, isotemp brand • Aluminum foil • Thermometer • Forceps, large • Thermometer • Tissue Tek® Slide Rack • Tissue Tek® Staining Dish • ImmEdge™ Hydrophobic Barrier Pen

Equilibrate equipment

1. Turn on HybEZ™ Oven and set temperature to **40°C**.
2. Place a Humidifying Paper in the Humidity Control Tray and wet completely with distilled water.
3. Insert covered tray into oven and close the oven door. Warm the tray for **30 MIN** at **40°C** before use. Keep the tray in the oven when not in use.

Prepare 1X RNAscope® Target Retrieval Reagents

Please refer to **Appendix B. Target Retrieval Using the Oster® Steamer** on page 19 for information on an alternate highly recommended method known as the target retrieval method using the Oster® Steamer.

IMPORTANT! Do not boil the 1X RNAscope® Target Retrieval Reagents more than **30 MIN** before use.

1. Prepare 700 mL of fresh RNAscope® 1X Target Retrieval Reagents by adding 630 mL distilled water to 1 bottle (70 mL) 10X Target Retrieval Reagents in the beaker. Mix well.
2. Place the beaker containing RNAscope® 1X Target Retrieval Reagents on the hot plate. Cover the beaker with foil and turn the hot plate on high for **10–15 MIN**.
3. Once 1X RNAscope® Target Retrieval Reagents reaches a slow boil (**98–102°C**), turn the hot plate to a lower setting to maintain the correct temperature. Check the temperature with a thermometer.

Apply RNAscope® Hydrogen Peroxide

1. Lay deparaffinized slides on the bench and add ~5–8 drops of RNAscope® Hydrogen Peroxide to cover the entire section.
2. Incubate slides for **10 MIN** at **RT**.
3. Remove RNAscope® Hydrogen Peroxide solution from one slide at a time by tapping and/or flicking the slide on absorbent paper. Immediately insert the slide into a Tissue-Tek® Slide Rack submerged in a Tissue-Tek® Staining Dish filled with distilled water.
4. Wash slides 3–5 times by moving the Tissue-Tek® Slide Rack up and down in the distilled water.
5. Repeat Step 4 with fresh distilled water.


Apply RNAscope® Target Retrieval Reagents

1. With a pair of forceps *very slowly* submerge the slide rack containing the slides into the boiling RNAscope® 1X Target Retrieval Reagents solution. Cover the beaker with foil and boil the slides for the amount of time specified by the table in **Appendix A. Tissue Pretreatment Recommendation** on page 17.
2. Use the forceps to *immediately* transfer the hot slide rack from the RNAscope® 1X Target Retrieval Reagents to the staining dish containing distilled water. Do not let the slides cool in the Target Retrieval Reagents solution.
3. Wash slides 3–5 times by moving the Tissue-Tek® Slide Rack up and down in the distilled water.
4. Wash slides in fresh 100% Alcohol and allow the slides to dry completely at **RT**.

Create a barrier

1. Use the following template to draw a barrier 2–4 times around each section with the Immedge™ hydrophobic barrier pen.

IMPORTANT! Do not let the barrier touch the tissue section. An Immedge™ hydrophobic barrier pen is highly recommended. An alternative type of pen may result in suboptimal results. Do not let the barrier touch the tissue section.

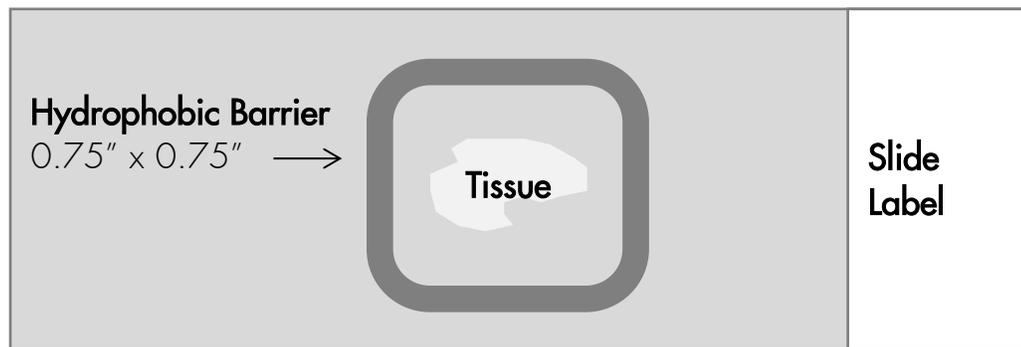

Note: We do not recommend drawing a smaller barrier and using less than the recommended volume amounts, even for smaller sections. Larger barriers will result in fewer tests per kit.

2. Let the barrier dry completely **~1 MIN** or **OVERNIGHT** at **RT**.

Note: If you need to reapply the hydrophobic barrier during the following procedures, dry the appropriate area of the slide with a kimwipe. Do not touch the tissue section.

OPTIONAL STOPPING POINT. Dry slides overnight for use the following day, or proceed directly to the next section.

IMPORTANT! We do not recommend stopping the protocol for duplex assays until after hybridizing your sample with probe. Refer to PART 2, RNAscope 2.5 Duplex Detection UM-322500.

Apply RNAscope® Protease Plus

1. Place dried slides on the HybEZ™ Slide Rack, and add ~5 drops of RNAscope® Protease Plus to entirely cover each section.
2. Remove the HybEZ™ Humidity Control Tray from the HybEZ™ Oven and place the HybEZ™ Slide Rack in the tray. Close the lid, seal, and insert tray back into the oven. Incubate at **40°C** for the amount of time specified by the table in **Appendix A. Tissue Pretreatment Recommendation** on page 17.

- Note:** If needed, prepare RNAscope® 2.5 assay materials during this step.
3. Remove the HybEZ™ Humidity Control Tray from the oven. Remove the HybEZ™ Slide Rack from the tray. Place tray back into the oven.
 4. Take each slide one at a time from the HybEZ™ Slide Rack and tap/and or flick to remove the excess liquid. Immediately place each slide in a Tissue-Tek® Slide Rack submerged in a Tissue-Tek® Staining Dish filled with distilled water.
 5. Wash slides 3–5 times by moving the Tissue-Tek® Slide Rack up and down in the distilled water.

Proceed to the RNAscope® 2.5 Assay

While the slides are incubating, proceed *immediately* to an RNAscope® 2.5 Assay. Ensure you have the appropriate user manual. User manuals are available at www.acdbio.com/technical-support/user-manuals.

Troubleshooting

For troubleshooting information, please contact technical support at support@acdbio.com.



Appendix A. Tissue Pretreatment Recommendation

Follow the recommended pretreatment conditions based on your tissue type for:

- Any new or previously untested FFPE tissue types.
- Samples prepared differently than the sample preparation protocol found in *Formalin-Fixed Paraffin-Embedded (FFPE) Sample Preparation and Pretreatment, Part 1* (Document No. UM-322452).

Tissue pretreatment recommendation

1. Stain representative samples using the positive and negative control probes.
2. Fix sample in fresh 10% NBF for **16–32 HRS** at **RT**.

Note: Perform tissue fixation step using the recommended amount of time. Over or under-fixation will result in significant signal loss when performing the RNAscope® Assay.

3. Depending on your tissue type, vary the amount of time for the Target Retrieval Reagents and/or Protease Plus. Refer to the following section.

Reagent	Mild	Standard	Extended
RNAscope® Target Retrieval Reagents	15 MIN	15 MIN	30 MIN
RNAscope® Protease Plus	15 MIN	30 MIN	30 MIN

Note: Some sample types, such as certain Xenografts and Cell Pellets, may require less time. For these tissue types, vary the RNAscope® Target Retrieval Reagents time to **8 MIN** and RNAscope® Protease Plus time to **15 MIN**. For the ACD Cell Pellet sample, we recommend a **10 MIN** treatment with Target Retrieval Reagents, and a **30 MIN** treatment with RNAscope® Protease Plus. If you have a tissue type not listed, contact support at support@acdbio.com.

Tissue-specific pretreatment conditions

For suboptimally treated samples, you may need to optimize pretreatment conditions. Refer this document and information provided at www.acdbio.com/technical-support/solutions.

If your sample fixation is successful in fresh 10% NBF (see Step 2 from the preceding protocol), then refer to the following table for tissue-specific pretreatment conditions. For information about species or tissue type not listed here, contact support at support@acdbio.com.

Species	Tissue Type	Pathology	Pretreatment Condition
Mouse/Rat	Intestine	Normal	Standard
	Intestine	Tumor	Standard
	Embryo	Normal	Standard
	Brain	Normal	Standard
	Spleen	Normal	Mild
	Eye/Retina	Normal	Standard
	Liver	Normal	Extended

Species	Tissue Type	Pathology	Pretreatment Condition
	Kidney	Normal	Standard
Human	Breast	Tumor	Standard
	Colon	Tumor	Standard
	Colon	Normal	Standard
	Lung	Tumor	Standard
	Lung	Normal	Standard
	Prostate	Tumor	Standard
	Prostate	Normal	Standard
	Lymph node	Tumor	Standard
	Lymph node	Normal	Standard
	Tonsil	Normal	Standard
	Pancreas	Normal	Standard
	Cervical	Cancer	Standard
	Cervical	Normal	Standard
	Cervical dysplasia	Abnormal	Standard
	Brain	Tumor	Standard
	Brain	Normal	Standard
	Head	Cancer	Standard
	Neck	Cancer	Standard
	Liver	Cancer	Standard
	Kidney	Normal	Standard
	Skin	Normal	Standard
	Melanoma	Tumor	Standard
	Nevus	Benign	Standard
	Placenta	Normal	Standard
	Skin (TMA*)	Normal	Standard
	Breast (TMA)	Normal	Standard
	Melanoma (TMA)	Normal	Standard
	Nevus (TMA)	Benign	Standard
	Stomach (TMA)	Normal	Standard
	Stomach (TMA)	Tumor	Standard
	Cell pellets, fixed with 10% NBF	—	Mild
	HeLa cells, fixed with 10% Formaldehyde/PBS/ACD Control	—	10 MIN Target Retrieval; 30 MIN Protease Plus

* Tissue Microarray

B

Appendix B. Target Retrieval Using the Oster® Steamer


This procedure details using Oster® Steamer Model 5709 and a digital thermometer for precise temperature control.

Note: Steaming with the Braun Multiquick FS-20 Steamer is possible. Users of the Braun Multiquick FS 20 Steamer are instructed to both fill the water to the maximum level before starting and to not refill water during pretreatment steaming.

Prepare the steamer

1. Fill the water reservoir with cold tap water to the "HI" marking line.

IMPORTANT! Do not overfill.

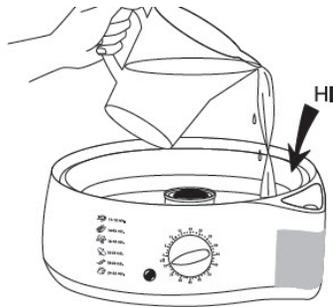

2. Place a clear Steaming Bowl onto the base.
3. Place two slide holders in the steam bowl. Fill one slide holder with 200 mL of Target Retrieval Reagents. Fill the other slide holder with 200 mL of distilled H₂O.
4. Turn on the Steamer. Set the steamer timer by turning the black knob clockwise. Set heating time to **95 MIN**.
5. Insert a digital thermometer through the holes of the lid and into the container containing Target Retrieval Reagents. Allow temperature to rise to at least **99°C**.
6. Add slides to the container containing distilled H₂O for 10 seconds to acclimate slides.
7. Remove slides and move them to the container containing Target Retrieval Reagents (Cat. No. 322200). Cover the Steamer with lid.
8. Start timer for **15 MIN** for mild and standard conditions, **30 MIN** for extended. Please consult the Tissue Pretreatment table in **Appendix A. Tissue Pretreatment Recommendation** on page 17.
9. Remove slides from steamer and transfer to a separate rinse container with 200 mL of distilled water. Allow slides to rinse for **15 SEC**.
10. Transfer slides to 100% alcohol for **3 MIN**.
11. Dry slides in **60°C** incubator (or at room temperature).
12. Draw hydrophobic barrier and continue with RNAscope® assay.



Appendix C. Safety

Chemical safety



WARNING! GENERAL CHEMICAL HANDLING. To minimize hazards, ensure laboratory personnel read and practice the general safety guidelines for chemical usage, storage, and waste provided below, and consult the relevant SDS for specific precautions and instructions:

- Read and understand the Safety Data Sheets (SDSs) before you store, handle, or work with any chemicals or hazardous materials. To obtain SDSs, <http://acdbio.com/technical-support/user-manuals>.
- Minimize contact with chemicals. Wear appropriate personal protective equipment when handling chemicals (for example, safety glasses, gloves, or protective clothing).
- Minimize the inhalation of chemicals. Do not leave chemical containers open. Use only with adequate ventilation (for example, fume hood).
- Characterize (by analysis if necessary) the waste generated by the particular applications, reagents, and substrates used in your laboratory.
- Ensure that the waste is stored, transferred, transported, and disposed of according to all local, state/provincial, and/or national regulations.
- **IMPORTANT!** Radioactive or biohazardous materials may require special handling, and disposal limitations may apply.

Biological hazard safety



WARNING! BIOHAZARD. Biological samples such as tissues, body fluids, infectious agents, and blood of humans and other animals have the potential to transmit infectious diseases. Follow all applicable local, state/provincial, and/or national regulations. Wear appropriate protective equipment, which includes but is not limited to: protective eyewear, face shield, clothing/lab coat, and gloves. All work should be conducted in properly equipped facilities using the appropriate safety equipment (for example, physical containment devices). Individuals should be trained according to applicable regulatory and company/institution requirements before working with potentially infectious materials. Read and follow the applicable guidelines and/or regulatory requirements in the following:

In the U.S.:

- U.S. Department of Health and Human Services guidelines published in Biosafety in Microbiological and Biomedical Laboratories found at: www.cdc.gov/biosafety
- Occupational Safety and Health Standards, Bloodborne Pathogens (29 CFR§ 1910.1030).
- Your company's/institution's Biosafety Program protocols for working with/handling potentially infectious materials.
- Additional information about biohazard guidelines is available at: www.cdc.gov/

In the EU:

- Check local guidelines and legislation on biohazard and biosafety precaution and refer to the best practices published in the World Health Organization (WHO) Laboratory Biosafety Manual, third edition.
- Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH).



Documentation and Support

Obtaining SDSs

Safety Data Sheets (SDSs) are available at: www.acdbio.com/technical-support/user-manuals. For the SDSs of chemicals not distributed by Advanced Cell Diagnostics, contact the chemical manufacturer.

Obtaining support

For the latest services and support information, go to: www.acdbio.com/technical-support/support-overview.

At the website, you can:

- Access telephone and fax numbers to contact Technical Support and Sales facilities.
- Search through frequently asked questions (FAQs).
- Submit a question directly to Technical Support.
- Search for user documents, SDSs, application notes, citations, training videos, and other product support documents.
- Find out information about customer training events.

Contact information

Advanced Cell Diagnostics, Inc.

3960 Point Eden Way

Hayward, CA 94545

Toll Free: 1-877-576-3636

Direct: 1-510-576-8800

Fax: 1-510-576-8801

Information: info@acdbio.com

Orders: orders@acdbio.com

Support Email: support@acdbio.com

Limited product warranty

Advanced Cell Diagnostics, Inc. and/or its affiliate(s) warrant their products as set forth in the ACD General Terms and Conditions of Sale found on the ACD website at www.acdbio.com/store/terms. If you have any questions, please contact Advanced Cell Diagnostics at www.acdbio.com/about/contact.

Headquarters

3960 Point Eden Way Hayward, CA 94545 Phone 1-510-576-8800 Toll Free 1-877-576-3636

For support, email support@acdbio.com.

www.acdbio.com

